



Window Film Factory™

01752 837 278

0800 080 7974 (free from UK landlines)

info@windowfilmfactory.com

www.windowfilmfactory.com

36 Birchland Road, Sparkwell, Devon PL7 5DN

How to Install Pre-spaced Safety Markings

(v1.1)

Things you will need:

Masking tape


Chinagraph pencil (optional)

Rigid squeegee (you can use an old credit card)

Spirit level (useful, but not essential)

An assistant to help you

Anatomy of your markings

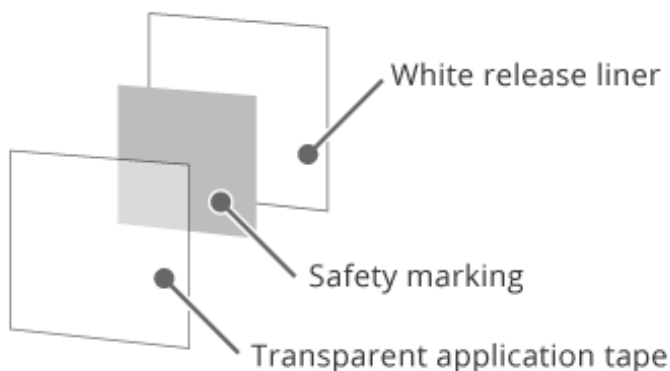


Your safety markings will be sandwiched between a transparent application tape on one side, and a white release liner on the other.

Do not remove these layers yet!


Step 1: Position your markings

Position the markings at the correct location (see extra tips below), and temporarily hold the graphic in place with a few pieces of masking tape.

Next; use a strip of masking tape to create a hinge along the top of the markings.

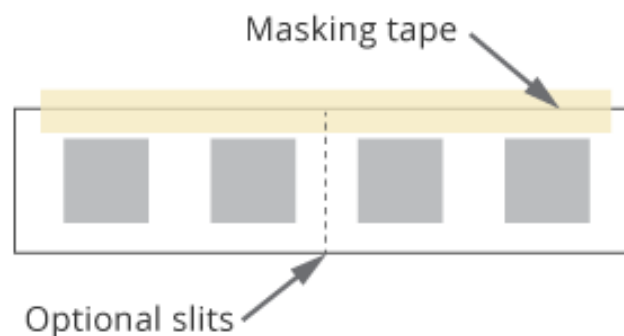


Step 2: Apply your markings

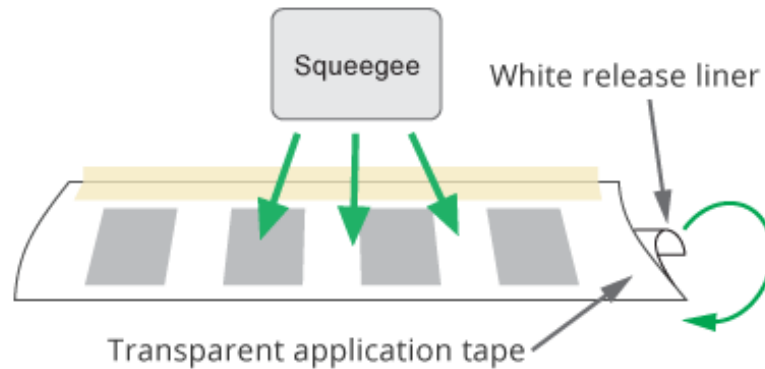

Lift up the markings and peel back the white release liner - This will expose the sticky side of the markings. Make sure you don't allow the markings to swing back down and touch the glass, or they may stick prematurely in the wrong position. (It's a good idea to have an assistant, hold the markings up)

Using an old credit card, press firmly down on the markings, in a top to bottom motion (so as not to trap air bubbles).

Step 3: Remove application tape

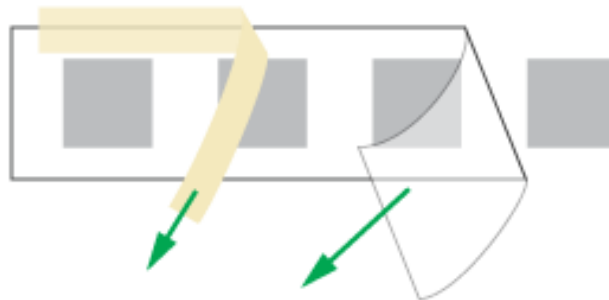

Now you can peel away the transparent application tape, to reveal the markings.

Tips to aid installation:

Use a spirit level to create a perfectly horizontal guide line on opposite side of the glass. A china graph pencil is ideal for this, or you could also use strips of masking tape.

Tape the strip of markings in the correct place, then snip between individual markings with a pair of scissors. Doing this will allow you can install individual markings more easily.